

Fault Troubleshooting

Please follow the below steps before reporting a fault.

Check 1

Make sure that the vehicles batteries are charged and that ample power is being supplied to the microwave unit. If batteries are low, start the vehicles engine and run for 5 minutes. The microwave unit has a safe guard against low power and battery drain.



Check 2

On the back of the microwave unit is an RCD switch. Please check that this is in the "Up" position.



Check 3

Check there is power being supplied to the microwave. Double check all in-line fuses.



Check 4

On the front of the microwave is a black rocker switch. Check that the switch has an illuminated red light.



Still not working?

Report the fault to the dealer you purchased the microwave from or fitting centre that installed the microwave unit. TruckChef Service Exchange Procedure applies.

WARRANTY INFORMATION

TruckChef units carry a return to base warranty. Any unit which has been troubleshooted following the procedure above and still deemed to be faulty will require the unit to be returned to the retailer, dealer or fitting centre from where it was originally purchased.


Warranty will be void if the product is tampered with or dismantled in any way.

TruckChef 20

24v Microwave Safety, Instruction and Warranty Manual

Key Features

- 24v Input
- 800w Power
- 20 Litre Capacity
- Digital Control System
- Stylish Black Design
- Secure Locking Door
- 60 Minute Digital Timer
- 6 Microwave Power Levels

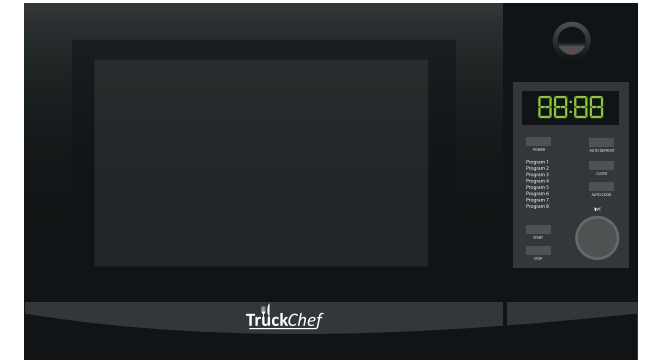

Technical Specifications

- 40 Amp In-line Fuse Recommended (Within Wiring Loom)
- Full Fitting Kits and Templates Provided for Quick and Easy Fitting.
- Full Warning Details Printed to Outside of Microwave Unit.
- Additional Protection Provided by RCD and Built in Fuse.
- 21.5v (+/-) Cut Out. Preventing Any Vehicle Non-starts.
- EC Approved, CE Marked, EMC Approval.
- Low Voltage Directive Approval - 2014/35/EU
- Restriction of Hazardous Substances Directive - 2011/65/EU
- Materials & Articles in Contact with Food - 1935/2004/EC

IMPORTANT WARNING NOTES

Warranty will be void if the product is tampered with or dismantled in any way. It is recommended that this appliance should only be fitted by a qualified vehicle electrician. When fitting you must allow at least 25mm clearance under the microwave for circulation. **NEVER USE WHILE VEHICLE IS IN MOTION. ONLY WITH HANDBRAKE APPLIED.**

Using your microwave

Please Read Before first use.

Ensure all packaging has been removed from inside the microwave unit, the rotating cooking plate is securely packed in foam from the factory.

For optimum ventilation ensure there is no obstruction to any of the built in vents on your microwave or vehicle fitting kit.

Only operate the microwave oven when your vehicle is stationary with the handbrake / parking brake applied. This device should NEVER be used when the vehicle is in motion.

Digital Control Panel

A brief overview of the operations available on your microwave oven.


1. Digital Display - Indicates cooking time and power action indicators.

2. Power - Touch this button to a number of times to set microwave power level.

3. Stop / Cancel - Press to cancel setting or reset the oven before next use. Press once to temporarily stop cooking, or twice to cancel cooking all together.

4. Time - Turn the dial to enter your required cooking time.

5. Start - Touch to start cooking. You can also press this button a number of times to add 30 seconds of full power cooking time (Quick Start).

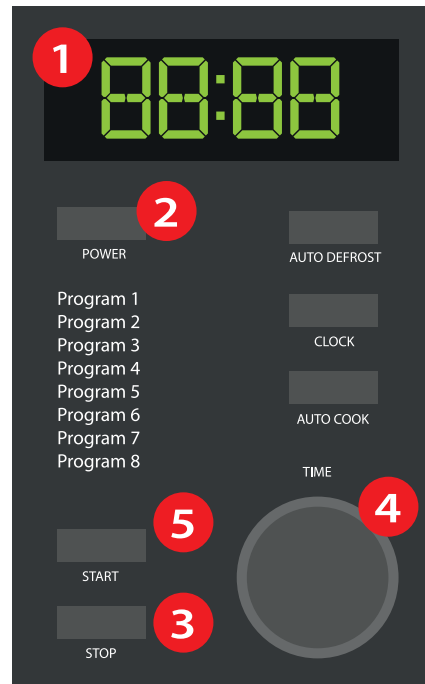

COOKING TIMES

Pre-Set cooking programs and cooking times are only a guide.

NEVER presume food is cooked just because a program has been used.



Microwave Cooking

Selecting a Power Level

Press the "Power" button multiple times to reach the required power setting. There are six power settings, these are;

- 100% - Press Power Button Once.
- 80% - Press Power Button Twice
- 60% - Press Power Button Three Times
- 40% - Press Power Button Four Times
- 20% - Press Power Button Five Times
- 0% - Press Power Button Six Times

MICROWAVE POWER

Please note, the microwave runs off a 24v power feed. You should not expect the same power levels of which you may be use to from a household 240v microwave oven.

Cooking Food Evenly

This microwave oven has a rotating cooking surface to enable even cooking. There should be no obstruction to this turntable.

It is advised that food is turned at least once during cooking and, depending on the type of food, stirred from the outside to the centre of the cooking dish.

ALWAYS CHECK FOOD IS COOKED AND HOT BEFORE CONSUMPTION.

Fitting Matrix

The below matrix displays which microwave type (rear mount or side mount) fits which vehicles and with what type of fitting brackets.

Vehicle	DAF CF (High Roof)	DAF XF (Space Cab)	DAF XF (S/S Cab)	Iveco Stralis (H/W)	MAN TG LX Single Bunk	MAN TG XLX/XXL	MB Actros Mega/S	MB Actros 4 Giga/S
Micro Unit Brackets	Rear Mount Base Plate	Rear Mount Uni Legs	Rear Mount Uni Legs	Side Mount Uni Legs	Side Mount LX Rear Shelf	Rear Mount MAN Legs	Side Mount Uni Legs	Side Mount Uni Legs
Fascia Panel	-	-	-	-	-	MAN Panel	MP3 Panel	-
Kit Part No	DAFCF	DAFXFSC	DAFXFSSC	IVECOST	MANLX	XLX/XXL	MERCMEG	MP4GIG

Vehicle	MB Actros 4 Big/S	MB Actros 4 Stream/S	Renault T Low Roof	Renault T High Roof	Scania Highline	Scania Topline	Volvo FH/FM GL / XL (V3)	Volvo FH/FM GL / XL (V4)
Micro Unit Brackets	Rear Mount Uni Legs	Side Mount S/S Rear Shelf	Side Mount T Rear Shelf	Rear Mount T Base Plate	Side Mount Uni Legs	Side Mount Uni Legs	Side Mount V3 Legs	Rear Mount V4 Plate
Fascia Panel	B/S Panel	-	-	T Panel	-	T/L Fascia	-	V4 Panel
Kit Part No	MP4BIGSP	MP4STREAM	RENT	RENTH	SCAN	SCANT	VOLGLO	VOLGLO4